



INFINITI.

G
SEDAN
&
COUPE



QUICK REFERENCE GUIDE

QUICK REFERENCE GUIDE

Introduction

2005 G35 SEDAN AND COUPE

This easy-to-use Quick Reference Guide is intended to provide you with a user-friendly learning experience to quickly acquaint you with your new Infiniti.

- The Quick Reference Guide will help you to more fully appreciate your vehicle's superior features, unique functions and advanced technology.
- Refer to the Quick Reference Guide to learn how to personalize your vehicle's controls and equipment to maximize your driving comfort and convenience.

However, this guide is not intended as a substitute for your vehicle's Owner's Manual. For comprehensive product and vehicle safety information, please refer to your Owner's Manual. It will help you to better understand the operation and proper maintenance of your new Infiniti vehicle.

Both Infiniti and your Infiniti dealer are dedicated to serving all your automotive needs. Your complete satisfaction is our primary concern. It is suggested that you read this Quick Reference Guide and your vehicle's Owner's Manual thoroughly before contacting your Infiniti dealer with related questions.

Features and functions described in this Quick Reference Guide may differ, depending on whether the vehicle is a Coupe or Sedan model. For your convenience, where differences exist, the words "Sedan ONLY" or Coupe ONLY" are provided.







contents

	Page
COMFORT	
Automatic Temperature Control (Heater and Air Conditioner)	1
Defrosting/Defogging	2
Seat Adjustments	3
Heated Seats	3
Driver's Seat/Steering Wheel Memory	4
Rear Passenger Entry/Exit Assist	5
 DRIVING CONTROLS	
Instrument Panel Layout	6
Headlights	7
Front Wiper/Washer Controls	8
Center Display	8
Front-Passenger Air Bag Status Light	8
HomeLink® Universal Transceiver	9
Controls on Inside Rear View Mirror	9
Manual Transmission - Lock-Out/Shifting To Reverse	9
Manual Transmission - Up-Shift Indicator Light	10
Steering Wheel Mounted Cruise Control Switches	10
ATTESA E-TS™ All Wheel Drive (AWD)	11
Snow Mode ON/OFF Switch	11
 CONVENIENCE	
Intelligent Key/Remote Keyfob Functions	11
12-Volt Power Outlet	14
Analog Clock - Setting The Clock	14
Opening Fuel-Filler Lid	14
 AUDIO	
Audio Systems	15
Customize Radio Presets	18
Special Features	18
 NAVIGATION	
Navigation System	21
 OTHER FEATURES	
Screw-In Tow Hook	28
Child Safety Rear Door Locks	28



AUTOMATIC TEMPERATURE CONTROL (Heater and Air Conditioner)

Refer to section 4 in your Owner's Manual for complete Heater and Air Conditioner operation instructions.

- 1 **Front Defroster button**
- 2 **Rear Window Defroster button**
- 3 **Fresh Air button** - Selects outside air for cooling/heating/defrosting.
- 4 **Air Recirculation button** - Select inside air for maximum cooling.
NOTE: Use of the Air Recirculation button may cause the inside windows to fog up.
- 5 **AUTO/ECON button** - Press to select either "automatic" mode cooling/heating or "economy" mode cooling/heating.
- 6 **Temperature Set Knob (driver only, or driver and front-passenger)** - Raises or lowers the temperature for the driver- and/or passenger-side.
- 7 **UP or DOWN Manual Fan Speed control buttons** - Press to manually control fan speed.
- 8 **MODE (Manual air flow control) button** - Press to select air flow location:
 -  Air flows from center and side vents.
 -  Air flows from center and side vents, **plus** foot outlets.
 -  Air flows mainly from foot outlets.
 -  Air flows from the front defroster and foot outlets.
- 9 **A/C (air conditioning) button** - Press to turn A/C (cooling function) ON/OFF.
- 10 **OFF button** - Press to turn heating and cooling functions OFF.
- 11 **DUAL ZONE button** (if so equipped) - Press to allow the driver and front-passenger to choose their own climate control settings.

DUAL ZONE button (if so equipped)

Refer to section 4 in your Owner's Manual for complete Dual Zone operation instructions.

Driver/Passenger Mode Shown

Pressing the Dual Zone button changes the zones as follows:



Driver/Passenger, Driver, Passenger, Driver/Passenger



DEFROSTING/DEFOGGING WINDSHIELD AND FRONT SIDE WINDOWS

Refer to section 4 in your Owner's Manual for complete Defrosting/Defogging operation instructions.

- 1 **Front Defroster** - Press the **FRONT** Defroster button to turn it **ON**. When **ON**, the indicator light on the button will illuminate.

NOTE: When you press the DEFROST button, you may hear a click noise from the engine area. This is normal. The Air Conditioner compressor is being activated. The A/C ON pulls moisture from the air, helping to defrost the inside windows more quickly.

- 2 **Temperature Set** - Turn the Temperature Set Knob to set the desired temperature.

- 3 **High Defrost** - Press the **UP** Manual Fan Speed Control button  to set fan speed to maximum.

DEFROSTING/DEFOGGING REAR WINDOW AND OUTSIDE MIRRORS

Refer to section 2 in your Owner's Manual for complete Defrosting/Defogging operation instructions.

- 4 **Rear Window Defroster** - Press the Rear Window Defroster button to turn it **ON**. When **ON**, the indicator light on the button will illuminate.

Press again to turn it **OFF**. Or, it will turn **OFF** automatically after 15 minutes.





POWER SEAT ADJUSTMENT SWITCHES

Refer to section 1 in your Owner's Manual.

DRIVER'S SEAT - 8-WAY POWER



FRONT-PASSENGER'S SEAT - 4-WAY POWER



DRIVER'S SEAT MANUAL LUMBAR SUPPORT LEVER

Move the Lumbar Support Lever **FORWARD** or **BACKWARD** to adjust the amount of lumbar support.

COUPE ONLY

For maximum support, the Lumbar Support Lever can be moved **beyond a horizontal position**.



DRIVER AND PASSENGER HEATED FRONT SEAT SWITCHES

Refer to section 2 in your Owner's Manual.

HIGH heat - Rock the switch to the **RIGHT**.

LOW heat - Rock the switch to the **LEFT**.

NO heat - Rock the switch to the **center (OFF)** position.

NOTE: The indicator light on the switch will illuminate when heat is selected.



comfort



SEDAN ONLY

DRIVER'S SEAT/STEERING WHEEL MEMORY

Automatic Drive Positioner
(if so equipped)

Refer to section 3 in your Owner's Manual.



The Driver's Seat Memory system has **two** functions.

A/T (AUTOMATIC TRANSMISSION) EQUIPPED VEHICLES ONLY

1) ENTRY/EXIT FUNCTION

- With the transmission in **PARK** position, the Driver's Seat Memory system can automatically move the driver's seat **BACK** and tilt/telescope steering wheel **UP** and **AWAY FROM YOU** to ease vehicle entry and exit.

A/T (AUTOMATIC TRANSMISSION), AND 6MT (MANUAL TRANSMISSION) EQUIPPED VEHICLES

2) MEMORY STORAGE


- Driver's Seat Memory can be set to adjust the driver's seat and steering column (tilt/telescope) to two separate preset/memorized positions.

TO SET CUSTOMIZED SEAT AND STEERING POSITION MEMORY:

- 1 Put the shift selector in:
 - PARK (A/T vehicles) or
 - NEUTRAL (MT) vehicles, and set the Parking Brake.
- 2 Turn the ignition switch **ON**.
- 3 Push the AUTO side of the Cancel Switch.
- 4 Adjust the driver's seat and steering wheel to the desired positions.
- 5 Push the **SET** switch. The indicator lights on both Memory switch 1 and 2 will illuminate green.
- 6 **Within 5 seconds**, press **Memory switch 1 or 2** and **hold** it for at least 1 second.

NOTE: The indicator light on the Memory switch you select will **blink** one time when seat and steering memory is set correctly.

- 7 To link seat and steering memory to your:
 - Intelligent Key **or**
 - Remote Keyfob

After the indicator light on the Memory switch blinks one time to indicate "set" (as described in step 6, above) press the **UNLOCK**  button on your Intelligent Key or Remote Keyfob. This indicates the Keyfob or Intelligent Key is matched to the memory positions just set. You may set the 2nd seat and steering memory positions to your other Keyfob or Intelligent Key by repeating the steps above.

NOTE: When the CANCEL side of the switch is pressed, the Driver's Seat Memory system will not function.

COUPE ONLY

REAR PASSENGER ENTRY/EXIT ASSIST (WALK-IN DEVICE)

Refer to section 1 in your Owner's Manual.

For ease in entering and exiting the rear passenger areas of the vehicle, perform the following steps:

TO ENTER/EXIT REAR SEAT

1) Flip the seatback forward by pulling **UP** on:

- the seat reclining lever OR
- the seatback lever.



2) Push the seat slide button (located under the seatback lever) to slide the seat forward.



3) Additionally, the front seat belt upper guide bracket (service arm) can be pushed toward the back of the vehicle.



TO RETURN FRONT SEAT TO ITS ORIGINAL POSITION

- 1) **FIRST**, push the seat slide button to slide the seat backward.
- 2) **THEN**, push or pull the seatback to its original position until it locks in place.

NOTES:

- If you push or pull the seatback toward its original position while the seat is sliding back, **the seat sliding action will stop**. See your Owner's Manual for more information.
- This feature will not operate while the doors are closed and the seat belts are fastened.

driving controls



INSTRUMENT PANEL LAYOUT/DRIVER CONTROLS

Refer to section 2 in your Owner's Manual.

- 1 Headlight, Fog Light and Turn Signal Switch
- 2 Steering Wheel Switches for Audio Control
- 3 Cruise Control Switches
- 4 Outside Mirror Remote Control
- 5 Instrument Panel Brightness Control
- 6 Trunk-Release Switch
- 7 Vehicle Dynamic Control (VDC OFF) Button
Refer to section 2 in your Owner's Manual for details.
- 8 Hood Lock Release Lever
- 9 Manual-Tilt/Telescopic Steering Wheel Lock Lever
- 10 Steering Wheel Power Tilt/Telescopic Knob (if so equipped- Premium Package)
- 11 Wiper and Washer Switch
- 12 Snow Mode Switch (if so equipped)
- 13 Automatic Transmission **Manual Shift Mode**
- 14 Hazard Warning Light Switch
- 15 Heated Seat Switches







HEADLIGHT/FOG LIGHT/TURN SIGNAL SWITCH

Refer to section 2 in your Owner's Manual.

HEADLIGHT SWITCH

- Parking, side marker, tail, license plate, and instrument panel lights **ON**. 
- Headlights **ON** (all other lights will remain **ON**). 
- High beam - Push the lever **FORWARD** (away from you).



AUTOMATIC HEADLIGHT OPERATION (if so equipped)

The Automatic Headlight system can automatically:

- Turn the headlights **ON** when it is dark.
- Turn the headlights **OFF** when it is light.
- Keep the headlights **ON** for 45 seconds after you turn the key to **OFF** and open and close any door.

TO ACTIVATE THE AUTOMATIC HEADLIGHT SYSTEM:

- Turn the headlight switch to the **AUTO** position.

TO DEACTIVATE THE AUTOMATIC HEADLIGHT SYSTEM:

- Turn the headlight switch to the **OFF**, , or  position.



driving controls

FRONT WIPER/WASHER CONTROLS

Refer to section 2 in your Owner's Manual.

- **Intermittent** - Pull the lever **DOWN** one notch. Rotate the inner knob to the desired speed.
- **Low Speed** - Pull the lever **DOWN** two notches.
- **High Speed** - Pull the lever **DOWN** three notches.
- **Washer** - Pull the lever **REARWARD** (toward you).
- **Single Sweep** - Lift lever **UP**, then release.

NOTE: Intermittent wiper speed also varies according to vehicle speed.




CENTER DISPLAY

Refer to section 2 in your Owner's Manual.

When the ignition is in the **ON** position, the following are examples of center display information that can be viewed:

- Analog Clock
- Compass
- Heater and Air Conditioner Display
- Ambient Outside Temperature
- Front-Passenger Air Bag Status Light

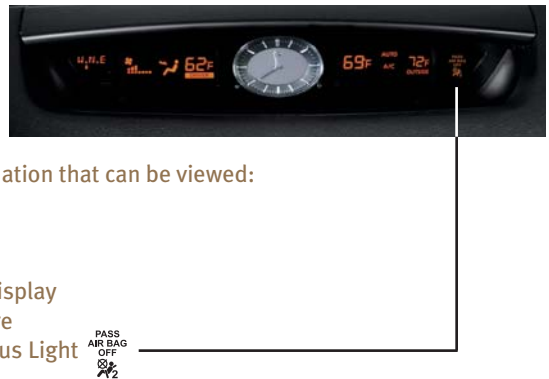

FRONT-PASSENGER AIR BAG STATUS LIGHT

Refer to section 1 in your Owner's Manual for detailed information regarding the Air Bag System.

This vehicle is equipped with front impact supplemental air bags. This Infiniti air bag system can help cushion the impact force to the head and chest of the driver and front-passenger in certain frontal collisions.

The front-passenger air bag is designed to automatically turn off under some conditions. If the front-passenger air bag is off, the front-passenger air bag status light will be illuminated. The light will also be illuminated any time the front-passenger seat is not occupied.



HOMELINK® UNIVERSAL TRANSCIVER (if so equipped)

This feature can memorize up to three unique signals to operate remote devices such as garage doors.

Refer to the **PROGRAM CARD** located in the owner's literature portfolio and section 2 of the Owner's Manual for operation of these buttons.

CONTROLS ON INSIDE REAR VIEW MIRROR (Automatic Anti-Glare) (if so equipped)

Refer to section 3 in your Owner's Manual.

When the **"AUTO"** (ON) button is pressed, the mirror will be set in the **AUTOMATIC** position (green indicator light ON). Excessive glare from the vehicle behind yours will be reduced.

When the **"OFF"** button is pressed, the mirror will operate normally (green indicator light OFF).

MANUAL TRANSMISSION

Refer to section 5 in your Owner's Manual.


LOCK-OUT

In 6-speed Manual-transmission-equipped vehicles, the shift lever is equipped with a Reverse lock-out feature that prevents accidental selection of reverse (instead of 6th gear).


SHIFTING TO REVERSE

Push the shift lever **DOWN**, then move it to the **RIGHT** and **BACK** into **REVERSE**.

NOTE: The 6-speed manual vehicle is equipped with a short shift gate lever for shifting convenience. When shifting, always depress the clutch pedal fully to avoid shift noise and gear grind.

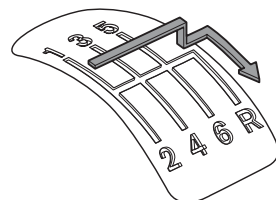

driving controls

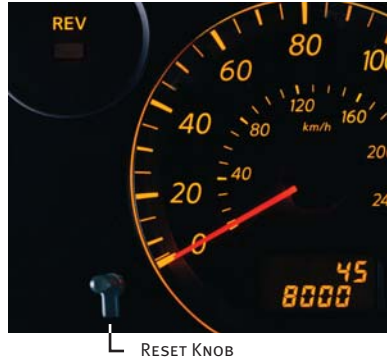

UP-SHIFT INDICATOR LIGHT

The up-shift indicator light is located beneath REV (which is permanently illuminated). While driving, the indicator light lights up to indicate 'shift point' or time to up-shift.

- The indicator light will begin flashing about 500 RPM before a pre-set engine RPM shift point is reached in any gear. Then, when the actual pre-set RPM shift point is reached, the indicator will stop flashing and remain ON.
- You may set the engine RPM shift point between 2,000 and 8,000 RPM by increments of 100 or 500. Use the reset knob to change the RPM shift point setting.

NOTE: To deactivate the up-shift indicator light, set the shift point figure at above 7,900 RPM (the initial factory setting is 8,000 RPM).

CHANGING THE RPM SHIFT POINT SETTING:

1. Push the reset knob until the engine RPM shift point figure is shown in the display. You may need to page through Trip Odometer A and/or B displays in order to view the RPM shift point figure.
2. Push the reset knob again for **more than 2 seconds**. The engine RPM shift point figure will blink for approximately 5 seconds.
Change the shift point setting while the RPM figure is blinking:
 - by increments of 100 RPM, push and **quickly release** the reset knob.
 - by increments of 500 RPM, push and **hold** the reset knob.
3. When you reach the RPM shift point setting you desire, **stop pressing the reset knob**. The shift point figure will blink for approximately 5 seconds and then stop blinking, indicating it is set.

STEERING WHEEL MOUNTED CRUISE CONTROL SWITCHES

Refer to section 5 in your Owner's Manual for cruise control operation instructions.

To turn **ON** Cruise, push the **ON-OFF (MAIN)** switch.

When you reach the desired speed, push down on the **COAST/SET** switch to set the fixed speed. The **SET** indicator light will illuminate. Cruise Control is **ON**.

The preset speed can be cancelled by:

- tapping the brake,
- pressing the **ON-OFF (MAIN)** switch **again**, or
- pressing the **CANCEL** button.





ALL-WHEEL DRIVE ONLY

ATTESA E-TS™ AWD (ALL-WHEEL DRIVE) WITH DRIVER SELECTABLE "SNOW MODE" ON/OFF SWITCH

(if so equipped)

Refer to sections 2 and 5 in your Owner's Manual.

The G35 Sedan is available with ATTESA E-TS™ All-wheel Drive (AWD). The system enhances all-weather performance by supplying additional traction from the rear wheels to the front wheels in various weather conditions.

- Press the dash-mounted "SNOW" switch **ON** for slick conditions. By reducing throttle sensitivity and distributing power 50/50 from a start, traction and driveability are enhanced.
- Press the switch to **OFF** for automatic AWD operation.



SEDAN MODELS EQUIPPED WITH PREMIUM PACKAGE (EXCEPT G35 SEDAN, 6 MT-MANUAL TRANSMISSION)

INTELLIGENT KEY SYSTEM

Refer to section 3 in your Owner's Manual for complete instructions on operation and functions of the Intelligent Key System.

This system allows you to lock or unlock your vehicle, open the trunk and start the engine with an Intelligent Key unit which may be carried in a pocket or bag.

Note: It's important to make sure the Intelligent Key is on "your person" (i.e. pocket or bag) when locking or unlocking the doors.




LOCK/UNLOCK OPERATION

- **Locking Doors** - Push any door handle Request Switch **once**.
- **Unlocking Doors** - Push any door handle Request Switch **once**. The corresponding door will unlock. Push the door handle Request Switch again **within 5 seconds**, all other doors will unlock.



OPEN TRUNK

In addition to using the Trunk Release button on the Instrument Panel, with the Intelligent Key System you can also open the trunk by doing one of the following:

- **PRESS** the Trunk-Release button  on the Intelligent Key for about a half a second,
OR
- **PRESS** the Trunk Request switch under the left taillight.



STARTING ENGINE FUNCTION

Push **in** the ignition "**KNOB**," confirm the Intelligent Key Warning Light is illuminated "green," then turn the ignition **KNOB** to start the engine.



convenience



REMOTE KEYFOB

For Vehicles **Except** Sedan, A/T Equipped Vehicles (with Premium Package)

Refer to section 3 in your Owner's Manual for complete instructions on operation and functions of the Remote Keyfob.

ADDITIONAL INTELLIGENT KEY INFORMATION

For Sedan, A/T Equipped Vehicles (with Premium Package)



THE INTELLIGENT KEY CAN ALSO BE USED AS A CONVENTIONAL REMOTE KEYFOB.

The Keyfob and Intelligent Key will operate up to approximately 33 feet from the vehicle. You can use the Keyfob or your Intelligent Key to control the following functions:

LOCK/UNLOCK OPERATION

- **Locking Doors** - Press the **LOCK** button  **once** to lock all doors.
- **Unlocking Doors** - Press the **UNLOCK** button **once** to unlock the driver-side door and fuel-filler lid only. Press the **UNLOCK** button again within 5 seconds to unlock all doors.

OPENING WINDOWS FUNCTION

Press and **hold down** the **UNLOCK** button  for longer than 3 seconds.

- All vehicle windows will open.
- Continue pressing (holding) the **UNLOCK** button until the windows are completely open.

PANIC ALARM

- Press and **hold down** the **PANIC** button  for longer than half a second to sound the horn and flash the headlights.
- You can stop the panic alarm by pressing **any button** on the Keyfob/Intelligent Key.

HORN BEEP

You may program your Keyfob/Intelligent Key to sound the horn when the **LOCK** function is completed.

- **To Activate** - press and **hold down** the **LOCK** and **UNLOCK** buttons for at least 2 seconds (the hazard indicators flash once and horn chirps once to confirm operation is complete).
- **To Deactivate (silence)** - Again press and **hold down** the **LOCK** and **UNLOCK** buttons for at least 2 seconds (the hazard indicators flash three times to confirm operation is complete).

Note: For vehicles equipped with Intelligent Key, the Horn Beep and Lights Flash feature can be **customized** on the center Display Screen using Vehicle Electronic Systems Menu.

Refer to section 4 in your Owner's Manual for details.



AUTO RE-LOCK FUNCTION

When the doors are unlocked with the **Door Request Switch**, or the **UNLOCK button** on the **Keyfob** or **Intelligent Key**, for security, after a few minutes all doors will automatically re-lock unless the following occurs:

- Any door is opened.
- The ignition switch/knob is turned to the ON position.

Note 1: For vehicles equipped **with** Intelligent Key the time for this function can be adjusted or turned **OFF** on the center Display Screen, using the Vehicle Electronic Systems Menu.

Refer to section 4 in your Owner's Manual for details.

Note 2: Close proximity of a cell phone to the Intelligent Key may interfere with the Lock/Unlock Logic.

AUTO UNLOCK FUNCTION

For Vehicles **without** Intelligent Key

This feature helps prevent accidentally locking the key in the car. It will not allow the doors to lock if the key is still in the ignition switch, **OFF** position.

OUTSIDE BUZZER

For Vehicles **with** Intelligent Key

A buzzer will sound if there is an attempt to exit the vehicle and lock the doors while the Intelligent Key is inside the vehicle.

OPENING/CLOSING ALL WINDOWS AND UNLOCKING/LOCKING DOORS WITH EMERGENCY OR METAL WALLET KEYS

The following keys allow you to unlock and lock doors and open and close windows while you are outside of the vehicle:

Refer to section 3 in your Owner's Manual for more details about this feature.

For Intelligent Key System:

Wallet Key

Mechanical Key

Valet Key



For the standard key system (not Intelligent Key):

Wallet Key

Valet Key

Master Key(s)



convenience

12-VOLT POWER OUTLET

Refer to section 2 in your Owner's Manual.



ANALOG CLOCK - SETTING THE CLOCK

Refer to section 2 in your Owner's Manual.

- To adjust the time **FORWARD**, press the **RIGHT** adjusting button.
- To adjust the time **BACK**, press the **LEFT** adjusting button.
- **Press** and **hold** buttons to sweep the hands to the desired time.



SEDAN

OPENING FUEL-FILLER LID

Refer to section 3 in your Owner's Manual.

To open the fuel-filler lid:

- Unlock all doors using the Keyfob, Intelligent Key or power door lock switch.
- Then push **in** on the **front side (3 o'clock position)** of the fuel-filler lid to release.



COUPE

OPENING FUEL-FILLER LID

Refer to section 3 in your Owner's Manual.

To open the fuel-filler lid:

- Unlock all doors using the Keyfob, Intelligent Key, or power door lock switch.
- Then push **in** on the **rear side (9 o'clock position)** of the fuel-filler lid to release.



FUEL-FILLER CAP HOLDER

Whenever you are refueling, the fuel-filler cap should be safely and conveniently secured in the fuel-filler cap holder.





AUDIO SYSTEMS

Refer to section 4 in your Owner's Manual for complete Audio System operation instructions.

1 CD eject button.

- Press the button for **less than 1.5 seconds** to eject the CD currently selected.
- Press the button for **more than 1.5 seconds** to eject **all** CD's currently stored in the CD Changer. The CD's will eject one after the other.

2 CD (DISC) play button - Activates and displays Audio or MP3 CD functions.

3 RADIO band select button (FM/AM/SAT*)

Press to change bands. The band sequence is AM, FM1, FM2, SAT1 (if SAT equipped and activated)*, SAT2 (if SAT equipped and activated)*

*No Satellite radio reception is available and "NO SAT" will be displayed when paging through the band selections unless optional satellite receiver and antenna were purchased and installed, and an XM® or SIRIUS™ satellite radio service subscription is active.

4 PTY (Program type)/CAT (Category) button (BOSE® Audio System)- Press to search for Program Types (example: JAZZ, ROCK, CLASSICAL, etc.).

OR

SSV button (Non-BOSE® Audio System) - Speed Sensitive Volume control. Press to change SSV. Choices are: SSV Off, SSV Low, SSV Mid, and SSV High.

5 DISP (Display) Change button

Displays additional information about:

- FM Band (not AM band) or SAT channel (if SAT equipped and activated)
- Audio CD Disc/Track Title, or
- MP3 CD Folder/File/Track Title or Artist.

6 CD insert slot.

- 7 **CD LOAD button** - Press to load Audio or MP3 CDs.
- 8 **TUNE/FF/REW switch** - Press for station tuning and fast forward/reverse functions.
- 9 **Audio Display**
- 10 **SEEK/TRACK switch** -
Radio: Seeks stations, stopping at the next or previous broadcasting station.
CD: Selects previous/next selections on the Audio or MP3 CD that is currently playing.
SAT Radio (if SAT equipped and activated): Seeks channels of the next or previous category.
- 11 **VOL (Volume) ON/OFF POWER knob**
 - Press to turn the audio ON/OFF.
 - Turn the knob clockwise to **increase** Volume level.
 - Turn the knob counter-clockwise to **decrease** Volume level.
- 12 **AUDIO button** - Press to select audio modes: BASS, TREBLE, FADE, BALANCE, SSV, (BOSE® Audio System **ONLY**), and Normal.
- 13 **AUTO-P button** - Press to scan and select the strongest stations in the area you are currently driving and automatically store them as “Auto.P” selections on the preset buttons (1-6).
- 14 **RPT (Repeat) play or RPT (Repeat) play - DISP (Display) button**
CD: Press to change the play pattern of a CD or CDs. CDs and CD tracks can be set to repeat play and to play in random order (mix).
SAT Radio (if SAT equipped and activated):
Press to display additional information about the radio broadcast (example: Artist's name, Song title, etc.).
- 15 **SCAN tuning button**
Radio/SAT Radio (if SAT equipped and activated): Press to scan stations, stopping at each broadcast station for 5 seconds. Press again to stop at a chosen station.
CD: If a single CD is playing, press to play each track of the CD in sequence for 10 seconds; if multiple CDs are playing, press to play the first track of each CD for 10 seconds.
- 16 **STATION and PRESET buttons (1-6)**
Radio/SAT Radio (if SAT equipped and activated): Use to select radio preset stations.
CD: Use to select which CD to play.



STEERING WHEEL MOUNTED AUDIO SWITCHES

Refer to section 4 in your Owner's Manual for complete audio operation instructions.

1 Audio Vol (Volume) UP/DOWN Control Switch

- 2 **Mode Switch** - Press to change bands. The band sequence is: AM, FM1, FM2, SAT1 (if SAT equipped and activated)*, SAT2 (if SAT equipped and activated)*, CD

*SAT radio operation requires optional SAT receiver and antenna and an active XM® or SIRIUS™ satellite service subscription. See Owner's Manual.

3 Audio PWR (Power) ON/OFF Switch

4 SEEK UP/DOWN Switch [Lower]

Use the SEEK UP/DOWN Switch as follows:

For Radio:

- Push the switch **UP** or **DOWN** for **less than 1.5 seconds** to page through the radio preset stations.
- Push the switch **UP** or **DOWN** for **more than 1.5 seconds** to scan the next or previous radio station on the band to which you are currently listening (FM, AM, or SAT).

For CD:

- Push the switch **UP** or **DOWN** for **less than 1.5 seconds** to return to the beginning of the present track or skip to the next track. Push several times to skip back or forward through multiple tracks.
- Push the switch **UP** or **DOWN** for **more than 1.5 seconds** to change to the next CD in the CD changer.





audio

How To CUSTOMIZE RADIO PRESETS

Refer to section 4 in your Owner's Manual for complete radio programming instructions.

A total of 30 presets can be set for the three radio bands: 12 stations can be set for the FM band (6 for FM1 and 6 for FM2), and 6 stations can be set for the AM band.



SAT RADIO:

If the option is purchased and service activated, a total of 12 stations can be set for SAT radio (6 for SAT1 and 6 for SAT2).

To set the **first** 6 FM band stations:

- Press the **"FM/AM"** button until "FM 1" is seen on the audio display.
- Tune to the desired FM station using the **SEEK/TRACK**, or **TUNE/FF/REW** switches.
- Press and hold down station memory button 1, until you hear a beep sound.
- Repeat the two steps above for the remaining 5 station memory buttons.

Repeat all steps above for the remaining "FM2" and "AM" bands.

AUDIO SYSTEM - SPECIAL FEATURES:

SSV (SPEED SENSITIVE VOLUME)

- Radio volume level can be set to automatically adjust as driving speed changes.
- Sensitivity Volume choices are:
SSV Off, SSV Low, SSV Mid, and SSV High



NOTE: See "CUSTOMIZING YOUR TONE SETTINGS" on page 19 for instructions on how to change SSV mode.



CUSTOMIZING YOUR TONE SETTINGS

(BOSE® and Non-BOSE® Audio Systems, except where noted)

Press the **AUDIO** button to select the desired mode.

The mode will appear in the display.

Then press the **TUNE/FF/REW** switch **UP** or **DOWN** to adjust the setting.

The order of the mode selection is as follows:

BASS, TREBLE, FADER, BALANCE,
SSV (BOSE® Audio System ONLY), Normal



For Non-BOSE® Audio Systems ONLY

A stand-alone **SSV button** is available to adjust radio sensitivity volume.

Press the SSV button **one time** to display the current SSV setting.

Press the SSV button **repeatedly** to page through the SSV choices (SSV Off, SSV Low, SSV Mid, and SSV High).

PTY (PROGRAM TYPE)

Used to search for certain program types such as JAZZ, CLASSIC ROCK, COUNTRY, etc.

TO SEARCH FOR A PROGRAM TYPE:

- Press the **PTY/CAT** button to display program types.
- Then press the **TUNE/FF/REW** switch to scan through the different program type options (i.e. JAZZ, CLASSIC ROCK, COUNTRY, etc.).
- When you find a program type to search, press the **SEEK/TRACK** switch within 10 seconds. The radio will tune to the next available PTY station for that program type.

NOTE: If you do not press the SEEK/TRACK switch within 10 seconds, PTY seek will be cancelled.



audio

DISP (DISPLAY) CHANGE

Press the DISP Change button to display audio related information (called “RDS-Radio Data System” information) transmitted by some radio stations on the FM band (not AM band) and/or Satellite band (if SAT equipped and activated) encoded within a regular radio broadcast.



If the station you are listening to is broadcasting RDS information, "RDS" will be displayed on the screen. Additional information may also be displayed:

- Station call sign/name/station announcement or description (i.e. KKJZ 88.1/"Cool Jazz"/"L.A.'s coolest jazz").
- Music or programming type (i.e. Jazz or Rock).
- The name of the song or the artist.
- Traffic reports about delays or construction.



In addition, when Audio or MP3 CD's are playing and are programmed with Disc/Folder and Track/File Titles, this information will be displayed.

TO DISPLAY INFORMATION:

Press the DISP button for more than 1.5 seconds.
"PSNAME ON" will be displayed on the screen.

TO SHOW NO DISPLAY:

Press the DISP button again for more than 1.5 seconds.
"PSNAME OFF" will be displayed on the screen.





INFINITI NAVIGATION SYSTEM

(if so equipped)

Your Infiniti Navigation System has many features that can help you find your destination. For complete instructions on the operation and functions of your Infiniti navigation system, refer to section 4 of your Owner's Manual and the 2005 G35 Infiniti Navigation System Owner's Manual.

- 1 **NAVIGATION DISPLAY SCREEN** - Displays navigation features and map.
- 2 **VOICE button** - Press to hear the current navigation situation.
- 3 **ROUTE button** - Displays "Quick Stop," "Where Am I," "Cancel Guidance," "Route Info.," and "Edit Route (Detour)" options.
- 4 **SETTING button** - Use to set navigation preferences.
- 5 **MAP button** - Displays the navigation map.
- 6 **DEST (Destination) button** - Displays Address Book and alternative ways of programming a destination.
- 7 **Joystick/ENTER button** - Use to maneuver around the Navigation Display Screen and select features displayed there.
- 8 **DAY/NIGHT button** - Press to change to DAY or NIGHT map display screen. Within 10 seconds of pressing the DAY/NIGHT button, you can adjust the brightness of the map display screen by moving the joystick to the right or left.
- 9 **CANCEL button** - Cancels previous command.
- 10 **ZOOM IN button** - Increases the scale of the map display (closer). There are nine levels of detail available.
- 11 **ZOOM OUT button** - Decreases the scale of the map display (further away). There are nine levels of detail available.
- 12 **PREVIOUS button** - Returns to the previous function shown on the navigation display.


POWER POP-UP AND TILT NAVIGATION SCREEN

For your convenience, the Navigation Screen can be automatically raised and lowered by pressing the button located on the top of the screen.



When the screen is raised, the screen angle can be customized by manually tilting it.

To select and change navigation settings, program your navigation system to a specific destination, and find and store information into your Navigation address book, use the following buttons:

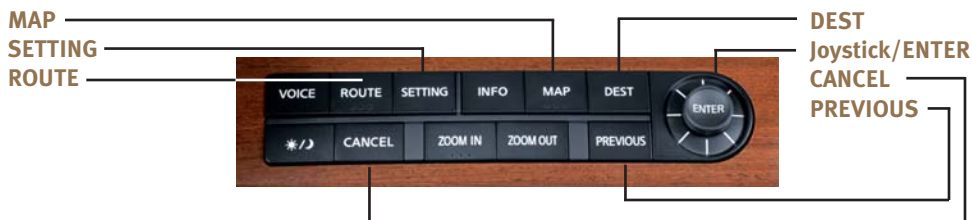

navigation

MENU SELECTIONS

 

Two types of Menus are available on your navigation system:

- **Easy Mode ("Short Menu"** - provides the 3 most commonly used Menu selections) **AND**
- **Expert Mode** (provides more Menu selection choices - 8 total).



Note: **Expert Mode** should be the default Menu set in your navigation system when you take delivery of your Infiniti Vehicle.

CHOOSING A MENU

- 1 Press **SETTING** button. 
- 2 With joystick, select **Short Menu**. 
- 3 Press **ENTER** to change between **ON** and **OFF**.
 - When the indicator light is **ON**, **Easy Mode (Short Menu)** is displayed.
 - When the indicator light is **OFF**, **Expert Mode** is displayed.

VOICE GUIDANCE

Turns Voice Guidance ON and OFF, adjusts Volume UP or DOWN.

- 1 Press **SETTING** button.
- 2 With joystick, select **Guidance Volume**.
- 3 Press **ENTER** to change between **ON** and **OFF** (the indicator light will be illuminated when Voice Guidance is **ON**).
- 4 To adjust volume, move joystick left or right.
- 5 Press **MAP** button to return to map screen.




VIEW (Plan View or Birdview™)

Allows you to choose between two available map views.


- 1 Press **SETTING** button.
- 2 Use joystick to select **Navigation**, then press **ENTER**.



- 3 Use joystick to select **View**, then press **ENTER**.

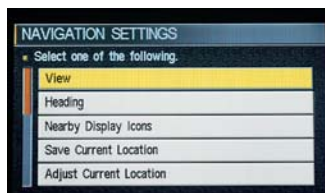

- 4 Select desired view with joystick, then press **ENTER**.
- 5 Press the **MAP** button to return to the map screen.

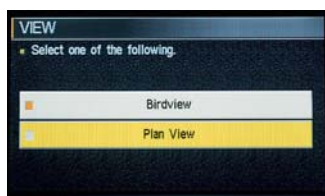

SETTING THE CLOCK

- 1 Press the **SETTING** button.
- 2 Use the joystick to select **Clock**, then press **ENTER**.
- 3 Use the joystick to select **Hours** or **Minutes**.
- 4 Move the joystick left or right to adjust the hour or minute time.
- 5 When you finish setting the clock, press the **PREVIOUS** button two times.



navigation

PROGRAMMING A DESTINATION

Pages 24, 25, and 26 describe the three most common methods used for programming the Navigation system to guide you to a desired destination point. Refer to section 5 of your 2005 G35 Infiniti Navigation System Owner's Manual for instructions on all methods.


Note: The vehicle must be stationary before performing destination programming.

- 1 Press **DEST** button. — 

Use the joystick for each of the following steps:

- 2 Select:
 - **Street Address**
 - **Point of Interest (POI), or**
 - **Phone Number**

Then press **ENTER**.

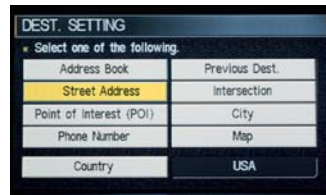


3-1 Street Address Programming


- a. Select letters to spell the street name. Press **ENTER** after each letter selection.




- b. Select **LIST**, then press **ENTER**.

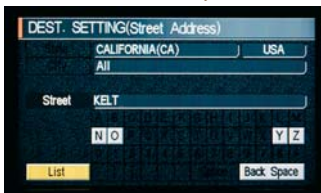


- c. Scroll to select the correct street and city from the list, then press **ENTER**.

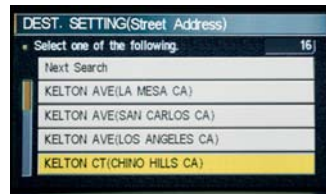

- d. Enter the house number, press **ENTER** after each number selection.

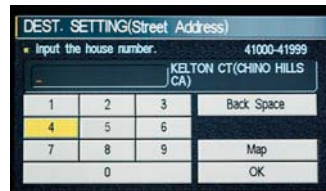

- e. Select **OK** and press **ENTER**.

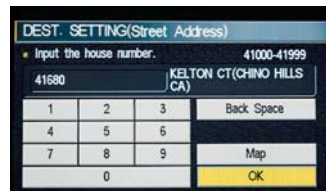

- f. Skip to step 4.

3-2 Point of Interest Programming (i.e. restaurant, ATM, hotel, etc.)

a. Select **Category** and press **ENTER**.

b. Select **LIST**, then press **ENTER**.

c. Choose the desired item from the list, then press **ENTER**.

Note: If RESTAURANT is selected from the list, you will be prompted to select your cuisine choice.

d. Select **Nearby**, then press **ENTER**.

e. Choose the desired location, then press **ENTER**.

f. Skip to step 4.

DEST. SETTING	
Select one of the following.	
Address Book	Previous Dest.
Street Address	Intersection
Point of Interest (POI)	City
Phone Number	Map
Country	USA

DEST. SETTING (POI)																																								
State	CALIFORNIA(CA) USA																																							
City	All																																							
Category	All																																							
POI																																								
<table border="1"> <tr><td>A</td><td>B</td><td>C</td><td>D</td><td>E</td><td>F</td><td>G</td><td>H</td><td>I</td><td>J</td><td>K</td><td>L</td><td>M</td></tr> <tr><td>N</td><td>O</td><td>P</td><td>Q</td><td>R</td><td>S</td><td>T</td><td>U</td><td>V</td><td>W</td><td>X</td><td>Y</td><td>Z</td></tr> <tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>&</td><td></td><td></td></tr> </table>		A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	1	2	3	4	5	6	7	8	9	&		
A	B	C	D	E	F	G	H	I	J	K	L	M																												
N	O	P	Q	R	S	T	U	V	W	X	Y	Z																												
0	1	2	3	4	5	6	7	8	9	&																														
List																																								

DEST. SETTING (POI)	
USA	
All	
Category	
All	A B C D E F G H I J K L M
Last 5 categories	N O P Q R S T W
List	

DEST. SETTING (POI)	
Select one of the following. 52	
AIRPORT	
AMUSEMENT PARK	
ATM	
AUTO SERVICE & MAINTENANCE	
AUTOMOBILE CLUB	

DEST. SETTING (POI)	
State	CALIFORNIA(CA) USA
City	All
Category	ATM
POI	
Nearby	A B C D E F G H I J K L M
N O P Q R S T U V W X Y Z	
1 2 3 4 5 6 7 8 9	
List	

DEST. SETTING (POI)	
Select one of the following. 50	
COMMUNITY BANK(GARD...	0.5 mi Info
FIRST REGIONAL BANK(T...	0.7 mi Info
WELLS FARGO BANK(GAR...	0.9 mi Info
LOS ANGELES TEACHERS...	0.9 mi Info
WELLS FARGO BANK(CAR...	0.9 mi Info

3-3 **Phone Number Programming**
(Used only for businesses or Points Of Interest that have phone numbers in the system)

a. Enter the phone number. Press **ENTER** after each number selection.

b. Select **OK**, then press **ENTER**.

c. Skip to step 4.

4 Select the desired route priority (i.e. shortest time, shortest distance, etc.), then press **ENTER**.

5 Select **OK**, then press **ENTER**.

Your navigation system will program route guidance to your selected destination.



STORING A LOCATION IN YOUR ADDRESS BOOK

- 1 Press **SETTING** button. — **SETTING**
- 2 With joystick, select **Navigation**, then press **ENTER**.
- 3 Select **Edit Address Book**, then press **ENTER**.
- 4 Select an **unused** numbered location in the Address Book List, press **ENTER**.
- 5 Select the destination programming method you want to use to store the location (i.e. Street Address, Point of Interest, Intersection, etc.).

To complete programming and select a desired route priority, follow the steps for the programming method you chose above.

The location will be stored in the numbered address book location you chose in step 4 (above).



6 Press the **MAP** button to return to the map screen. — **MAP**

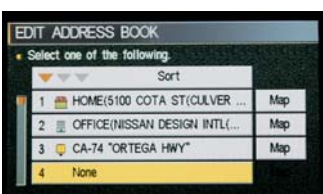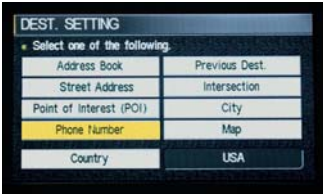

SHOW ROUTE HOME

Used only for your “Home” location, which you have stored to Location #1 in your Navigation Address book.

- 1 Press the **DEST** button. ——— **DEST**
- 2 With joystick, select **Address Book**, then press **ENTER**.
- 3 Select **HOME**, then press **ENTER**.
- 4 Select the desired route priority (i.e. shortest time, shortest distance, etc.), then press **ENTER**.
- 5 Select **OK**, then press **ENTER**. Your navigation system will now display route guidance to your HOME location.

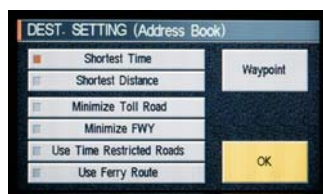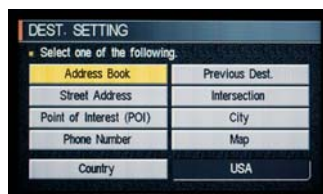


SAVE CURRENT LOCATION

- 1 Press the **SETTING** button. ——— **SETTING**
- 2 With joystick, select **Navigation**, then press **ENTER**.
- 3 Select **Save Current Location**, then press **ENTER**.

The current vehicle location will be stored in the next available address book location, and displayed on the Navigation Display screen.

- 4 Press the **MAP** button to return to the map screen.

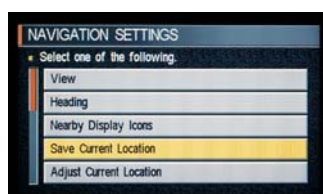

other features

SCREW-IN TOW HOOK

(INSTALL BEHIND THE FRONT LICENSE PLATE COVER)

Refer to section 6 in your Owner's Manual.

- Your vehicle is equipped with a screw-in tow hook for pulling the vehicle forward.
For example: pulling the vehicle onto a flat bed for towing.
- The screw-in tow hook tool is located in the right trunk area, next to the spare tire. It is stored with the jacking tools.

TO INSTALL THE TOW HOOK:

- Remove the front license plate cover.
- Install the tow hook as shown.
- Turn it clockwise until securely tightened.



CHILD SAFETY REAR DOOR LOCKS

Refer to section 3 in your Owner's Manual.

- The safety lock levers are located on the inside edge of the rear doors. Child safety locks help keep the rear doors from being opened from inside the vehicle.
- When the lever is moved from the **FREE** position to the **LOCK** position, the door can **only** be opened from the outside. If you cannot open a rear door from the inside, check the child safety lock switch.



All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. Infiniti Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your Infiniti dealer. All specifications, options and accessories shown in this guide apply to the 49 continental states. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the Infiniti logo, and INFINITI model names are Nissan trademarks.



INFINITI®